


# CONTENTS

## QUICK REFERENCE GUIDE

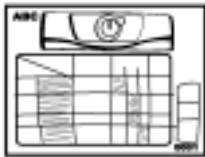

### PROGRAMME CHART

- PREPARING THE LAUNDRY
- SELECTING A PROGRAMME AND OPTIONS
- STARTING AND COMPLETING A PROGRAMME
- CHANGING A PROGRAMME
- INTERRUPTING A PROGRAMME
- DAILY MAINTENANCE AND CLEANING

## INSTRUCTIONS FOR USE



### BOOKLET

BEFORE USING THE DRYER / CONNECTIONS	PAGE 60
ELECTRICAL CONNECTION	PAGE 61
PRECAUTIONS AND GENERAL RECOMMENDATIONS	PAGE 62
DESCRIPTION OF THE DRYER	PAGE 63
DRAINAGE SYSTEM	PAGE 64
DOOR REVERSIBILITY / CHILD SAFETY LOCK	PAGE 65
HEAT EXCHANGER	PAGE 66
TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE	PAGE 67

# BEFORE USING THE DRYER / CONNECTIONS

## 1. Removing the packaging and check

- After unpacking, make sure that the dryer is undamaged. If in doubt, do not use the dryer. Contact After-Sales Service or your local retailer.
- Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, as they are potentially dangerous.
- Remove the protective foil from the control panel.

## 2. Electrical Connections

- Electrical connections must be carried out by a qualified technician in compliance with the manufacturer's instructions and current standard safety regulations.
- Electrical connection must comply with local Electricity Board regulations.
- Voltage information, power consumption and the required fuse protection is shown on the rating plate mounted at the rear of the dryer.
- The manufacturer cannot accept any liability for personal injury or damage to property resulting from failure to adhere to these instructions.
- The dryer must be earthed as prescribed by law.
- Do not use extension leads or multiple adaptors.
- Before any maintenance on the dryer disconnect it from the mains supply.
- Do not operate the dryer if it has been damaged during transport. Contact one of our After-Sales Service technicians.
- Mains cable replacement is only to be carried out by After-Sales Service.
- After installation access to the mains plug has to be guaranteed, or the all-pole disconnection has to be possible with a switch.

## 3. Installation

- Do not install your dryer where it can be subject to extreme conditions, such as: poor ventilation, temperatures around freezing or above 35° C.
- Before running the first cycle ensure the water container and heat exchanger are correctly positioned.
- Only for water container top version: if possible use a hose to drain the water directly into the domestic plumbing system. This will avoid having to empty the water container at the end of each drying cycle since the condensation water can be directly drained away. See also chapter "Drainage System".
- Take care not to install the dryer on a deep-pile carpet.
- Take care not to trap the mains cable between the dryer and the wall.

## Stability:

When installing the dryer always carefully level the dryer adjusting the four feet and check the correct levelling with a spirit level.

## To built in the dryer

Remove the work-top and replace it with the Built-In kit UBS 10 (according to Eec Electrical Regulations), available at your dealer.

## Stacking kit

Your dryer can be stacked on top of your front loading washing machine. The type of stacking kit is stated in the Instruction for use of your washing machine or pls. contact your dealer or our After Sales Service.

## Minimum housing dimensions:

Width: 600 mm

Height: 850 mm

Depth: 600 mm



# ELECTRICAL CONNECTION

## 1) For Great Britain only

**Warning - this appliance must be earthed**

### Fuse replacement

If the mains lead of this appliance is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:


1. Remove the fuse cover (A) and fuse (B).
2. Fit replacement 13A fuse into fuse cover.
3. Refit both into plug.

### Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted.

Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug.

Replacement fuse covers are available from your local electrical store.

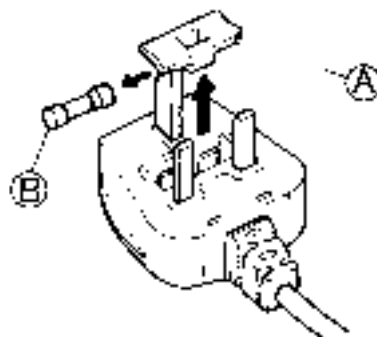

## 2) For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.


## 3) Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact Whirlpool Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified Whirlpool technician in compliance with the manufactures instructions and current standard safety regulations.

# PRECAUTIONS AND GENERAL RECOMMENDATIONS

## 1. Packing



The packing box may be fully recycled as confirmed by the recycling symbol .

## 2. Energy saving tips

- Always dry a full load: depending on the type of laundry and the programme/drying time.
- By preference use the maximum spin speed allowed by your washing machine, since draining the water mechanically requires less energy. You will save time and energy when running your drying cycle.
- Do not overdry the laundry.
- Clean the lint filter after **every** drying cycle.
- Place your dryer in a room with a temperature between 15° C and 20° C. In case of higher temperature ventilate the room.
- Always select the correct programme/drying time for the load in order to obtain the desired drying results.
- Select the *gentle* option only with small loads.
- When drying cotton, for example, dry *iron dry* and *cupboard dry* loads together. Start with the *iron dry* programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the *cupboard dry* setting.

## 3. Disposing of packaging and old Dryer:

The dryer is built from reusable materials. The dryer must be disposed of in compliance with local waste disposal regulations.

- Before scrapping, cut off the power cable so that the dryer cannot be connected to the mains.

## 4. Child safety:

Children must not be allowed to play with the dryer.

## 5. General recommendations:

- Always set the programme/time selector knob to the "0" position after use. This prevents the dryer from being switched on accidentally.
- Before cleaning or carrying out maintenance, switch off the dryer and disconnect it from the mains supply.
- To clean the outside of the dryer, use a neutral detergent and a damp cloth.
- Do not use abrasive detergents.
- Wipe away lint from the door seal and the door using a damp cloth.
- If the lint filter mesh is clogged, clean it with water and a soft brush.
- Since lint can go through the filter it is necessary to clean, from time to time, the complete filter area (including below the filter) with a brush, a damp cloth or with a vacuum cleaner.
- If necessary, the power cable may be replaced with an identical one obtained from our After-Sales Service. The power cable must only be replaced by a qualified technician.

## EC Declaration of Conformity


- This dryer has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:
  - 73/23/EEC Low Voltage Directive
  - 89/336/EEC EMC Directive
  - 93/68/EEC CE Marking Directive.



- The dryer must only be used in the household for the prescribed uses.

# DESCRIPTION OF THE DRYER

- A. Work top.
- B1. Water Container bottom version or
- B2. Water Container top version.
- C. Contact pin.
- D. Door:  
To open the door: pull the handle.  
To close the door: push gently until closed.
- E. Filter.
- F. Child Safety Lock.
- G. Button for heat exchanger flap opening.
- H. Heat exchanger.

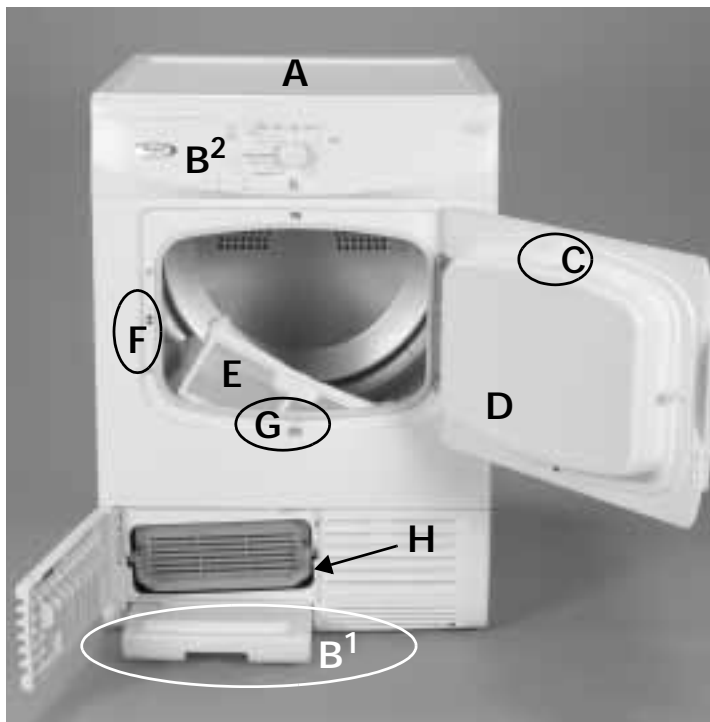

## Reminder - Maintenance and Cleaning

### Clean the lint filter at the end of every drying cycle.

Open the door  
Pull the filter upwards  
Open the filter  
Remove lint using a soft brush or your fingertips  
Close the filter  
Push the filter back into place.

## Heat exchanger

### Clean the heat exchanger at least every 3 months (See "HEAT EXCHANGER" chapter).

Wipe away any lint/fluff from the door seal and interior using a damp cloth.

# DRAINAGE SYSTEM

For water container top only



To avoid having to empty the water container at the end of each cycle, the condensation water can be drained away.

**Note:** Normally the drain hose is not supplied; the accessory AMH 883 kit, available at your dealer or our After Sales Service, should be used.

**The connection for direct draining is at the rear of the dryer.**

- A. Place an absorbent cloth underneath to collect water spillage.
- B. Remove the hose located at the lower rear part of the dryer and insert it in the nearby hole.
- C. Fix the hose (length: 1.5 m) to the outlet connection. The height difference between the two drainage connections should not exceed 1m.



**Notice:** To avoid siphoning, the end of the hose must not be immersed in the drain water. Avoid bending and twisting the hose.

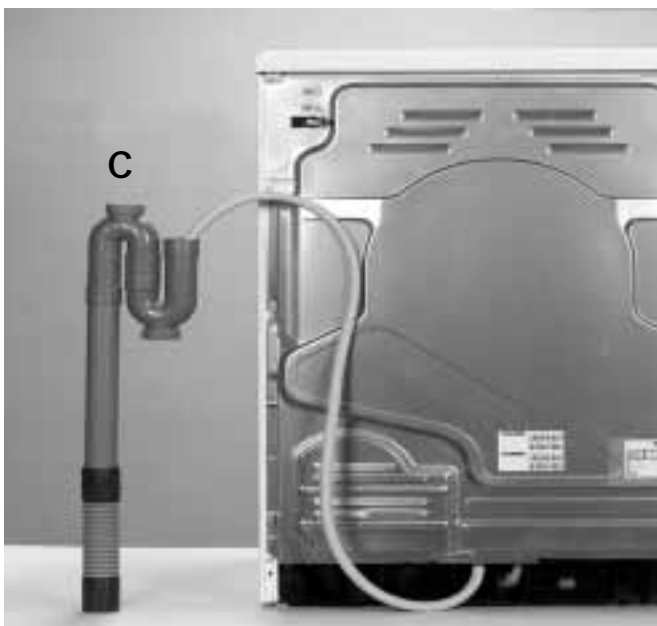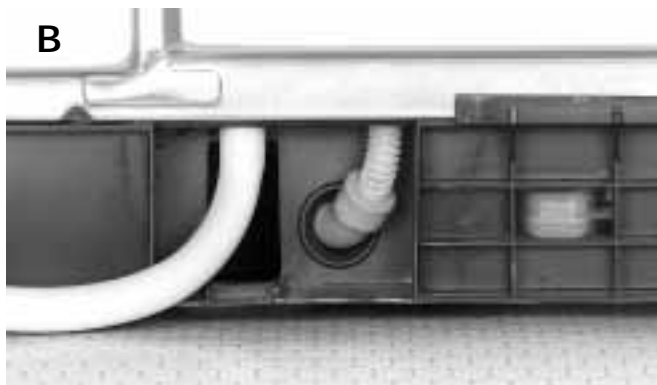

# DOOR REVERSIBILITY / CHILD SAFETY LOCK

## Door Reversibility

- A. Unplug the dryer.
- B. Open the door.
- C. Using a spanner, turn the contact pin in the upper part of the door by 90° and remove it.
- D. Unscrew the 2 screws of the door hinge and remove the door.
- E. Removing the door lock:  
Unscrew the 2 screws above and below the door lock system.  
Lift the door lock from the bottom, sliding it upwards about 1.5 cm, and remove it.
- F. Reverse the door:  
Fasten the door on the desired side with the 2 screws.
- G. Insert the door lock system on the opposite side of the hinge fixation and push it down 1.5 cm.
- H. Fix the 2 screws above and below the door lock system.
- I. Take care not to reverse the sense of the door lock system. The child safety must be above the locking mechanism.
- J. Replace the contact pin in the inside of the door (top).

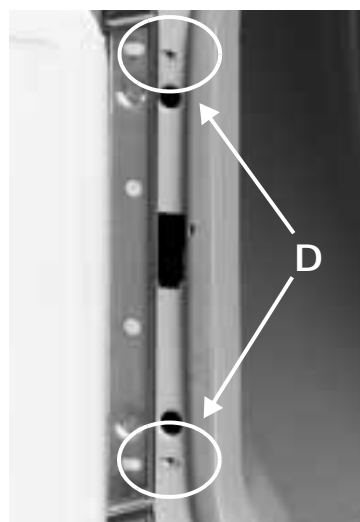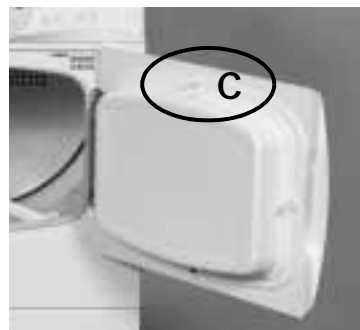

## Child Safety Lock

### How to use the child safety lock

- 1. Open the door.
- 2. Using a coin or a screwdriver, turn the plastic screw (J) clockwise 90°.  
Slot vertical: the door cannot be locked.  
Slot horizontal: the door can be locked.






# HEAT EXCHANGER

Before cleaning or carrying out maintenance, switch off the dryer.

Clean the heat exchanger at least every three months, proceeding as follows:

- A. Open the door and press the heat exchanger flap button on the bottom of the door entrance.
- B. The heat exchanger flap opens.
- C. Fold the heat exchanger handle upwards to the horizontal position and remove the heat exchanger.
- D. Clean the heat exchanger under running water by turning it around to reach all sides.
- E. Wipe away dust and lint from the seals and the heat exchanger.
- F. Remove the lint in the heat exchanger housing. Keep the drainage hole (left side in front in the housing) free from lint.
- G. Replace the heat exchanger in its housing (TOP or HAUT mark upwards) and press the handle.
- H. Close the flap.

The heat exchanger aluminium plates may become discoloured over time.

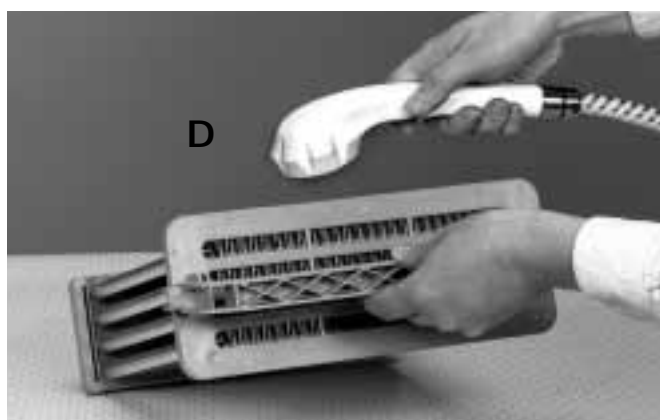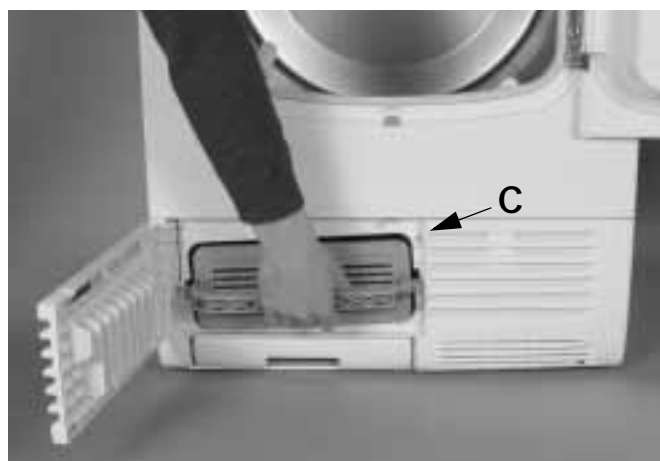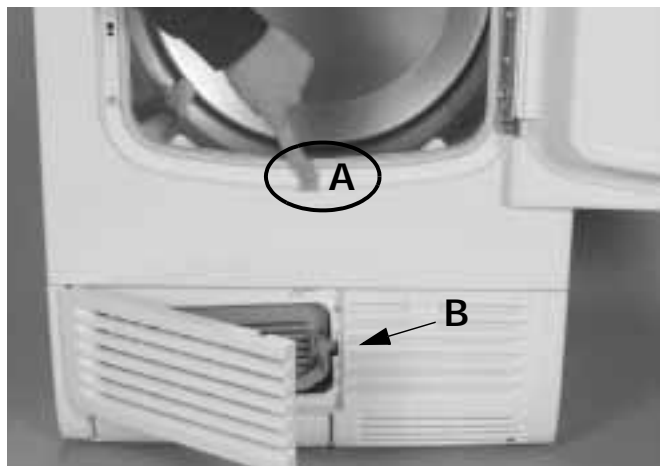



# TROUBLESHOOTING GUIDE / AFTER-SALES SERVICE

## Troubleshooting Guide

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:

**Drying takes too long / laundry is not dry enough:**

- Was the correct programme selected?
- Was the inserted laundry too wet (Washing machine spin speed less than 800 rpm? When the spinning speed is less than 800 rpm the water container fault may occur during the drying cycle)?
- Is the lint filter dirty (filter indicator lamp on)?
- Is the heat exchanger dirty? (refer to the Instructions for use)
- Is the ambient temperature too high?
- Are the END and Anti-crease indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.

**The dryer does not operate:**

(after a power failure and/or interruption to the mains supply, always press the **Start/Pause** button).

- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has the programme been selected?
- Has the start delay option been selected?
- Has the **Start/Pause** button been pressed?

**Lint filter or water container indicator lamp light on:**

- Is the lint filter clean?
- Is the water container empty?
- Is the water container correctly positioned?
- Is the heat exchanger clean?

**Water droplets underneath the dryer:**

- Is the heat exchanger correctly positioned?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been positioned correctly?

## After-Sales Service

If, after carrying out the above checks the malfunction persists or appears again, turn the dryer off and call our After-Sales Service (refer to guarantee).

**Please specify:**




- The nature of the fault.
- The dryer type and model.
- The service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.
- Your full address and phone number.



## Machine operation

Additional information (including troubleshooting and service) can be found in the individual chapters of the instructions for use.

### Sort laundry according to care symbols:

-  Do not tumble dry
-  Suitable for tumble drying - at low drying temperature
-  Suitable for tumble drying

Sort by:

**Material thickness:** Whenever there is greater load than the dryer can handle, separate laundry according to weight (e.g. dry towels and thin underwear separately).

**Type of material:** Cotton (linen); synthetic textiles (easy care).

**Degree of drying:** Cupboard dry, iron dry etc.

**Do not tumble dry:** Woollens, silk, nylon stockings, delicate embroidery, fabrics with metallic decorations, bulky items such as sleeping bags, etc.

### Preparing laundry

Check that all fastenings are closed and that pockets are empty. Please ensure that there are no cigarette lighters in the wash. Turn laundry inside out.

### Opening door

Pull the door handle. If the child safety lock is activated, please deactivate it (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

### Loading dryer and closing door

Place laundry loosely in the drum to achieve equal drying throughout. Then close the door.

### Switching on machine and selecting programme

Select the drying programme required by turning the programme selector knob (for information, refer to programme table).

 
### Selecting options (if available)

Select the option required by pressing the corresponding button. The indicator lamp above the relevant button lights up to confirm your selection. An alarm sounds if an incorrect selection is made (incompatible options). Press the button again to cancel the option.

### Starting dryer

The drying programme is started by pressing the **Start/Pause** button. The relevant indicator lamp lights up.

**Changing programme selection:** If the programme selected is changed during drying, the dryer stops. The Start/Pause indicator lamp flashes. To operate the new programme, again press the **Start/Pause** button.

**Interrupting programme:** To interrupt the dryer during the drying cycle, set the programme selector knob to Airing  and press the **Start/Pause** button. Wait at least 5 minutes before opening the door to allow the dryer to cool down. For your safety the drying cycle stops automatically if you open the door. To restart, after door opening, close the door and press the **Start/Pause** button again.

### Programme end - unloading dryer

**End** **End:** Take the laundry out of the dryer. The drying process is complete and the anti-crease phase has been reached (active).



**Anti Crease:** If the laundry is not removed at the end of the drying cycle, an automatic anti-crease cycle will operate for maximum 60 min. The drum rotates at regular intervals to prevent the laundry from creasing.

### Switching dryer off


















Set the programme selector knob to "O".

**Cleaning the lint filter:** Open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close lint filter and push firmly back into place.

**Emptying water container:** Pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

If required, activate child safety lock (additional information can be found in the "Door Reversibility/Child Safety Lock" chapter of the instructions for use).

**Please note:** Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

Overview of programmes						Options					Approximate drying times (in minutes)	
Type of textile			Fabrics	Volume of load kg	 Gentle	 Rapid	 Buzzer	 Anti-crease	 Delayed Start	Very wet load	Wet load	
Programmes / Drying levels												
Cotton		Cupboard dry +	Multi-layered, thick laundry such as: terry towels, dish cloths and dry towels, bed linen, underwear, terry towelling bath robes.	Cotton or linen hot wash / coloured laundry  Max. 6 kg	3.0 6.0	X	X	X	X	X	85' 150'	70' 120'
		Cupboard dry *	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		3.0 6.0	X	X	X	X	X	80' 130'	60' 110'
		Iron dry *	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		3.0 6.0	X	X	X	X	X	60' 110'	50' 85'
Mixed fabrics		Cupboard dry +	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry  Max. 2.5 kg	1.0 2.5	X	-	X	X	X	30' 55'	25' 45'
		Cupboard dry *	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		1.0 2.5	X	-	X	X	X	25' 45'	20' 35'
		Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		1.0 2.5	X	-	X	X	X	20' 35'	15' 25'
Delicate plus		Cupboard dry	Low drying intensity for delicates and items labelled with  , such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres such as polyamide, nylon, polyacrylic, etc.  Max. 2.5 kg	2.5	X	-	X	X	-	100'	85'
Airing	Laundry is aired and refreshed for 30 minutes without heating.				-	-	-	-	-	-	-	-
Time/cycle	Completes drying or dries single items (suitable for all fabrics).			20' 40' 60'	-	X	-	X	X	-	20' 40' 60'	

\* Test programme in accordance with EN 61121.

## How to proceed if ...

**...you want to correctly care for and clean your dryer:**

**Clean the filter at the end of every cycle.**



- Open the door.
- Pull the filter upwards.
- Open the filter.
- Brush lint using a soft brush or your fingertips.
- Close the filter.
- Push the filter back into place.

**Empty the water container at the end of each drying cycle.**



- Pull the handle to remove the water container.
- Empty the water container.
- Replace the water container when empty by pushing it **completely** back in place.

**...you want to check the dryer yourself first:**

(If your machine is not functioning correctly, please check the following points before phoning for the customer service – also refer to relevant chapter in the instructions for use)

**Drying takes too long / laundry is not dry enough**



- Has the correct drying programme been selected?
- Was the inserted laundry too wet (washing machine spin speed less than 800 rpm? When the spinning speed is less than 800 rpm, a water container fault may occur during the drying cycle)?
- Is the lint filter dirty (filter indicator light on)?
- Is the heat exchanger dirty? (for more information, refer to the instructions for use)
- Is the room temperature too high?
- Are the END and Anti-crease indicator lamps lighting up? The drying cycle is complete and the laundry can be taken out.

**The dryer will not operate (after a power failure, always press the Start/Pause button).**



- Is the plug properly inserted into the mains electricity socket?
- Is there a power failure?
- Has the fuse blown?
- Is the door properly closed?
- Has a drying programme been selected?
- Has the **Start/Pause** button been pressed?

**Lint filter or water container indicator lamp on.**



- Is the lint filter clean?
- Is the water container empty?
- Has the water container been inserted correctly?
- Is the heat exchanger clean?

**Water droplets underneath the dryer.**



- Has the heat exchanger been inserted correctly?
- Has any fluff on the heat exchanger seal been wiped away?
- Has any fluff on the door seal been wiped away?
- Has the water container been inserted correctly?

### AFTER-SALES SERVICE

If the fault is still present once the above checks have been undertaken or should the fault occur for a second time, switch the machine off. Please contact your after-sales service representative (for more information, refer to the warranty manual).

Please have the following details ready when calling your after-sales service representative:

- the nature of the fault.
- the dryer type and model
- the service code (the number after the word Service on the adhesive rating plate) on the right-hand side when the door is open.

**SERVICE** 0000 000 00000



Before using the machine, please also read the instructions for use carefully!

AWZ 9993

## Quick Reference Guide

GB



### Programme selector knob

The drying programme is selected by turning this knob.



### Start/Pause button

The drying programme is started by pressing this button. The indicator lamp flashes during the selection phase and lights up during drying.

## Indicator lamps



### Filter

The indicator lamp lights up when the filter and/or heat exchanger need cleaning.  
**Clean the filter at the end of every cycle.**



### Water container

The indicator lamp lights up when the water container needs to be emptied. The drying cycle is automatically interrupted. Empty the container and restart the drying programme.  
**Empty the water container after every drying cycle.**



### Time remaining display

 
Depending on the programme selected, once the drying cycle has been started, a default drying time is displayed. The time displayed is corrected by a few minutes depending on the volume, type and dampness of the laundry.  
**The drying time specified is a calculated value which will be updated during the drying programme.**



### Overdry protection

The indicator lamp lights up when a humidity controlled programme is selected, to indicate the working protection function. Function is not active in time controlled programmes 20' 40' 60' and Airing.

## Programme sequence



## Options



### Gentle

Reduces drying intensity (recommended for delicate items).



### Rapid

Shortens drying duration (recommended for thin items of the same size).



### Buzzer

Signals/sounds end of drying cycle.



### Anti-crease

Prevents laundry from creasing up to 12 hours. Buzzer and Anti-crease cannot be selected together.



### Delayed Start

Delays the start of the drying cycle by 1 to 12 hours.

Each time the button is pressed, the start time is delayed by 1 hour.

Then press the **Start/Pause** button to confirm the final selection and to start the dryer.

The delayed start indicator lamp flashes and the countdown counts down in 1-hour intervals. The countdown is indicated by the indicator lamp above the button flashing. During the countdown, the drum will turn from time to time to re-distribute the laundry. To cancel or change the previously set time delay, set the programme selector knob to "O" or open the door.